Quick Start Guide

Internet Protocol Access Control



INSTALLATION



Complete Site Survey

2 **Remove the Unit**

3

5

Lift the unit out of the carton and place it face down in the carton.

Remove the Knockouts

Use a punch tool that is one inch or less to remove knockouts based on your installation requirements.



Mount the Unit

Δ

Mount the unit securely to a flat surface or pedestal using the proper installation method listed in the installation manual. Make sure unit is properly sealed.



(open enclosure)



Connect Devices

Connect any maglocks, door strikes, operators or accessories to the relay board.



Connect Ethernet

Connect the LAN to the LAN port on the peripheral board.



Connect Power

Connect the transformer to the PWR IN terminal block on the relay board.



8

6

Switch to Program Mode

Switch into program mode by setting switch #1 on the peripheral board to ON.



CONNECT

Setup Network 9

Use the Site Survey to fill out the networking information in the administrative screen. Confirm settings in the Network Diagnostics tab.





Exit Program Mode 10

Switch out of program mode by setting switch #1 on the peripheral board to OFF.



LiftMaster

SETUP

User Agreement

In the address bar of your web browser, enter the IP address assigned to the unit. Read and accept the LiftMaster agreement.

For initial login, enter "admin" as the user name, and leave password blank.

The Locate Agreement of Eleveration by the the Locate Agreement of Eleveration by the Locate Agreement of the Agreement of Hell Schultz (1997) and the Hell Schultz (1997) and hell Schultz (1997) and hell Schultz (1997) and and the Agreement of the Agreement of Agreement of	construed in accordance with th ACT OR ANY VERSION THERH THAT UCTA BAPPL CABLE State of Maryland and You hered the entite agreement between the pair the entite agreement between the thou paor Nour breach of any ter no. The discidences of any ter no. The discidence of any ter	Lines of the Base of Maryland. Lines States of Annuals, THE EARTER 2004, Card, ADOYTED EVAN STATE, IS AN AVENT SMITH, LINES AND ANNUAL THE ANTERS AGREE TO OFF OUT OF THE APPLICATION YEAR STATES action of proceeding atrians in consolidation with his License Agreement at III by Annual Annual Annual Annual Annual Annual Annual Annual Annual Annual Name and Annual Annual Annual Annual Annual Annual Annual Annual Annual Annual Annual Annual Annu	EE THAT r TO suit, ror nal terms fon lance estroy all noeming Waryland
A. Portions of the Software use or include third p material are contained in the documentation for the	arty software and other copyright he Software or may otherwise acc	d material. Acknowledgments, licensing terms and additional disclaimers for su company such material, and Your use of such material is governed by their resp	ich ective
B. Certain software libraries and other third party Public License (LGPL) Version 2 or 2.1 and/or G such software libraries and/or third party software written request to Brivo. The LGPL and/or GPL s of MERCHANTABLITY or FITNESS FOR A PAI Description.	software included with the Softw NU General Public License (GPL under the terms of the LGPL are oftware is distributed in the hope in RTICULAR PURPOSE. Copies of	Ire are tree software and licensed under the terms of the GNU LibraryLesser G (Version 2, You may obtain a complete machine-readable copy of the source for GPL, without Linage except for the cost of media, thyping, and hadroning, that it will be useful. but WITHOUT ANY WARRANTY, without even the implied the LGPL, and OLL are included with the Software.	eneral ode for son werranty

2 Account Setup

Setup admin account, by creating a new admin name and password. Enter community name, and admin information.

	elcome to LiftMaster ACS OnSite™
11.0	tis is a new install:
~	are start by setting up an administrator with read-write access to the system.
	Eliter and feature name information Orack the lase and elitebolished to be Deter a logon name and passession Eliter a logon name and passession I is imported to the administerior trave enable-lite access to the system.
You	will be able to edit this user again by clicking the Users tab.
17 9	ou have just upgraded your ACS OnSite:
	Disk here funds here at ACE Orifin backus freund ward is instern.
eneral Settings	
First Name	
Last Name	
aministration	
in at ab	
Username	almon .
Preferred Language	Laste descript at insist 1
Password	
(ingenity	
Write Access	(Yes much and serie) (1)
(egen) Write Access Activate Devices	(No instantion of white 1)
Write Access Activate Devices	(The start and write" 1 () () () () () () ()

CONFIGURE

3 Configure a Gate/Door

Navigate to:

Configuration>Hardware>Devices>Create New Device> select Gate/Door. Complete options and settings for the Door.

Device Name Device Name Device Name Device Name Door Node International Schedule International Devices and schedules must being to Resettement Devices	
Device Name boo Facility Name a Door Node and Unlock Schedule boo evices and schedules must beilog to Beauthough Residence	
Facility Name Door Node Unlock Schedule increase and schedules must be Pacific and the Description of th	
Door Node and Unlock Schedule inco evices and schedules must below in	of Standard 1 - 5
Unlock Schedule Iner evices and schedules must belong to Basetbrough Basind	
Passiberush Parind	et 1 The same account
Construction of the second of the	accords
Shunt Alarm	
Delay g	accents
Invalid Access Code 3	(lines)
Invalid Access Code timer 30	(seconds)
invalid Access Code shutout 30	(seconda)
Report Door Ajar 🤘	
Ajar delay 120	(seconda)
Request-to-Exit (REX) 🚽	
REX fires door latch 🤘	
Two-factor Credential Inor Schedule Devic	eli 1 es and schedules must beiong to the same account.
Two-factor Timeout 10	(seconds)
Operate Device from website 🖉	
ccess Permissions	
Rease select the schedule in which a	ach group in this account is granted access to this device.
Staff Ala	aya 1
Visitors Ala	ars 3
coount Visibility	

5 Add Credentialed User

Navigate to:

User>Credentialed Users>Create New User. Enter staff and other credentialed user information including residents.

board History -	Users - Configuration -	System -		
Edit Credentia	aled User			
nistrator Information				
First Name Last Name Added Cards				
Access Code	Random: 4 5	6 2 8 Available Groups		
		Staff Visitors		
Enable on Date	08/12/2013 Select			
Expires on Date	Select			
🕞 is an admi	ristrator			
Username				
Preferred Language	(auto-detected at legio) . 2			
Password				
(again)				

4 Configure IPAC

Navigate to:

Configuration>Hardware>Devices>Create New Device>select IPAC Device. Enter the SIP account information from site survey, then complete options and settings for the unit.

Dashboard History -	Users + Configuration + System +
Edit IPAC Dev	vice
-B	
Settings	
Device Name	(manuf
Facility Name	
SIP Account Info	
SIP Domain	samedomain
Usemame	admin
Authorization ID	(cotional)
Password	
Server Port	SOLO //Generally this is 50601
Outbound Proxy	(otional)
Stun Server	Internal
	(downa)
Others	
Max. Call time	40 (default 60 sec)
Max. waiting time for call establish	20 (default 20 sec)
Display Greeting Message	
Speaker Volume	80 1 0 (Off) - 100 (Max)
MIC Volume	80 5 0 (Off) - 100 (Max)
Gate/Door(1)	(none) 1 DTMF Key 0 1 Accept Access Code
Gate/Door(2)	(nane) 1 DTMF Key 0 1 Accept Access Code
	Save Cancel

6 Add Resident Info

0

Navigate To:

User>Resident Directory Info>Create New Resident. Enter resident's information and assign a Directory Code.

Directory Name	6				
East Name	0	(e.g. "John Doe" OR "Doe, Jane")			
Farat Name					
Liest rearrie					
Directory Code	Hide Hesident in	Bandom (a)			
Primary Phone	Hanoom				
Alternate Phone					
Do Not Disturb Schedule	(none)	8			
Enable on Date	08/12/2013	Select			
Expires on Date	6	Select Sele Select Select Sele			
	Save Cancel				



VALIDATE

7 Validate the Setup

Test the following on the unit:

- Directory
- Directory Code
- Access Code

8 Unit Ready for Use The unit has been installed, setup, and is ready for use.

® 2014 LiftMaster All Rights Reserved 845 Larch Ave., Elmhurst, IL 60126 LiftMaster.com 114A4561B



